



## Quick Guide to the VISTA System Functions

FUNCTION	PROCEDURE	COMMENTS
Check Zones	Press [*]	To view faulted zones when system is not ready.
Display All Descriptors	Press and hold [*] for 5 seconds	Displays all alpha descriptors programmed by installer.
Arm System	Enter code Press arming key desired (AWAY, STAY, INSTANT, MAXIMUM)	Arms system in mode selected.
Disarm System	Enter code Press OFF [1]	Disarms system and silences alarms.
Bypass zones	Enter code Press BYPASS [6] Enter zone numbers to be bypassed (use 2-digit entries) 01,10	Bypassed zones are unprotected and will not cause an alarm if violated.
Quick Bypass	Enter code Press BYPASS (6) Press [#]	Bypasses all faulted zones automatically.
Chime Mode	Enter code Press CHIME [9]	Console will sound if doors or windows are violated while system is disarmed.
Test Mode	Enter code Press TEST [5]	Sounds alarm sounder and allows sensors to be tested.
View User Capabilities	Enter user's code Press [*] + [*]	Displays partitions & authority levels assigned to the user.
GOTO Partition	Enter security code Press [*] Enter partition number (1-2) 0 returns to default: partition	Allows a user at one console to perform functions in another partition, if that user is authorized to do so.
Add a User	Enter master/manager code Press CODE [8] Enter new users user number Enter code for that user. At prompt, enter authority for that user in this partition (1-5) Follow prompts, 1=Yes, 0=No	Master & Manager level users can add users to the system, each with its own code and authority level.
Change a user's Code	Enter master/manager code	Master & Manager level users can change their

	Press CODE [8] Enter user's 2-digit number Enter new code for that user Press 0 (No) at prompt.	own or other users' codes.
Delete a User	Enter master/manager code Press CODE [8] Enter user number to be deleted Enter master/manager code Press 1 (Yes) at prompt.	Master & Manager level users can delete users. A user can only be deleted by a user with higher authority level.
Self-Help	Press and hold any function key for at least 5 seconds.	Will display abbreviated instructions for the key pressed.