



## MOOSE Z1100 CONTROL PANEL

### ARMING AND DISARMING YOUR SECURITY SYSTEM

#### Arming Prior To Leaving the Building:

1. Verify that the READY light is on.
2. Press the ARM command (key #1) and your **Personal Authorization Code (PAC)**.
3. The control station will begin beeping and the red ARMED light will come on indicating that the system is armed.
4. Leave the building immediately.

#### Disarming Upon Entering The Building:

1. After entering through a delay zone, the control station will sound a steady entrance tone warning you to disarm the system.
2. Press the ARM command (key # 1) and your PAC.
3. The red ARMED light should be off indicating that the system is disarmed. If the ARMED light does not go off, press the (star key \* ) and restart the disarming procedure.

#### Arming The System Without Leaving The Building and Turning The Interior Protection Off:

1. Press the INTERIOR command (key # 4 ) and your PAC.
2. The yellow INTERIOR OFF light will come on.
3. Arm the system by using the ARM command.

**NOTE: When you disarm, the interior automatically returns to INTERIOR ON unless your installer has programmed it differently.**

#### Entrance Delay Zones:

##### Changing The Delay Zones To Instant:

1. Press the DELAY command ( key # 5 ) and your PAC.
2. The yellow INSTANT light will come on.
3. Arm the system using the ARM command.

**NOTE: When you disarm, the delay zones automatically return unless your installer has programmed them differently.**

### MONITORING ZONES WITH THE SYSTEM DISARMED: (CHIME MODE)

#### To Turn Monitor On:

1. The system must be disarmed.
2. Press the MONITOR command (key # 6) and your PAC.
3. The control station will beep three times each time a zone is opened.

#### To Turn Monitor Off:

1. Press the MONITOR command (key # 6) and your PAC.

#### What to do for A False Alarm:

1. Press the ARM command (key # 1) and your PAC.
2. The alarm should turn off. If it is not, press the (star key \* ) key and begin again.
3. Notify the appropriate authorities of the alarm immediately.

### DIAGNOSING A PROBLEM OR OPEN ZONE

**Zone Status Display:**

1. Lift the control station door to reveal the zone location label.
2. Press the ZONE STATUS command (key # 2) and your PAC.
3. The lights on your control station will now become zone status indicators.
4. If a light is on, it is an indication that a zone is open.

**Alarm Memory Display:**

1. Lift the control station door to reveal the zone location label.
2. Press the ALARM MEMORY command ( key # 3 ) and your PAC.
3. The lights on your control station will now become alarm memory indicators.
4. Any light that is on indicates the zone that caused the most recent alarm.
5. You may reset the blinking ARMED light by pressing the (star key \* ).

**Electrical Power And The Standby Battery:****Manually Testing The Battery:**

1. Press the SMOKE/BATT command ( key # 7 ) on your PAC.
2. Wait 5 seconds.
3. If the battery is fully charged, the power light will be on without blinking. If the battery is weak, the POWER light will start blinking and the control station will beep rapidly.
4. The (star key \* ) key may be pressed to silence the control station.

**Testing the Protection Sensors:**

1. The system must be disarmed and all zones must be secure.
2. Press the test command ( key # 8 ) and enter your PAC.
3. Open any protected door or window. The control station will beep and the green READY light will be off.
4. Close the opened door or window. The control station will stop beeping and the READY light will be back on.
5. Begin at step 3 and test the remaining sensors.
6. Press the (star key \* ) when finished testing.

**EMERGENCY PANIC ZONES****To Silence And Reset All Emergency Zones:**

1. Notify your alarm monitoring service immediately if the alarm was unintentional.
2. Press the (star key \* ) to silence the control station and the alarm.
3. Press the ARM command and your PAC to turn off the appropriate indicator light and to reset your system.

**To Activate The Emergency Police Zone From The Control Station:**

1. Press keys 1 and 3 at the same time.
2. The control station will beep rapidly and the yellow INTERIOR OFF light which is the Auxiliary 1/police indicator will blink and the alarm will sound.

**NOTE: Your system may be programmed for silent police operation. In that case there would be no sound or light as an indication of an alarm.**

**ZONE BYPASSING (SHUNTING)****To Bypass A Zone:**

1. The system must be disarmed.
2. Press the shunt command (the # key) and the zone number to be bypassed.
3. The READY light will start blinking indicating the zone has been bypassed.

**To Remove Bypassed Zones:**

1. The system must be disarmed.
2. Press the SHUNT command (the # key) and 9 which clears all bypassed zones.
3. The READY light will stop blinking.

**Note: All bypassed zones return to normal upon disarming the system.**