



MOOSE Z900 CONTROL PANEL

ARMING

Arming the System Prior To Leaving:

1. Verify that the READY indicator is on.
2. Enter your User Code.
3. The control station will begin beeping and the red ARMED indicator will blink to indicate that arming will take place after the exit time expires. (The ARMED indicator will light steady after the system arms.)
4. Leave the building immediately.

Arming the System Without Leaving:

Turning off the Interior Zones and Entrance Delay:

Control station key 4 may be used to turn the interior zones off prior to arming. This will allow the system to alarm instantly if the entrance door is opened, while armed.

1. Press the 4 key and hold three seconds.
2. When interior defined zones are turned off, the corresponding Zone indicators will flash. The flashing will stop 30 seconds after the system is armed.
3. Arm the system by entering your User Code.

**Note: upon disarming, the interior zones automatically re-enable unless your installer has altered this feature through programming.*

Automatic Interior Off/Delay Off:

Your system may have been programmed to automatically turn the interior zones off if you arm and do not leave the premises before the exit delay time expires. The entrance delay may also be programmed to automatically turn off at this time. When the system is disarmed, the interior and delay will return to their normal on or off state. See your security representative for details.

Two digit Arming:

Your system may have been programmed with an abbreviated arming feature. When this feature is enabled, only the first two digits of your User Code will be required to arm the system and perform other functions. Disarming however, will still require the entire code sequence.

DISARMING

Disarming Upon Entering The Premises:

**NOTE: If your system has the "Interior Follower" feature enabled, all interior designated zones automatically become delay zones whenever you first enter through a delay zone. This allows you to walk in front of motion detector on the way to the control station after you enter.*

1. After entering the premises through a delay zone, the control station will sound a continuous tone to remind you to disarm the system.
2. Enter your User Code.
3. The red armed light should turn off indicating that the system is disarmed.

ALARM CONDITIONS

What To Do If An Alarm Occurs:

*NOTE: If upon returning to the premises it is discovered that an alarm has occurred, DO NOT ENTER THE PREMISES. Leave immediately and go to the nearest phone and contact the appropriate authorities.

To reset the alarm:

1. Enter your User Code to reset the alarm.
2. The ALARM indicator will remain lighted.

If the alarm was activated through one of the six "hard-wire" zones, the corresponding ZONE indicator's will also be lighted, identifying the specific area that was violated. Use the zone ID card to determine the area of protection which corresponds to each zone.

If the alarm was activated manually by pressing one of the emergency keys, no zone indicators will be lighted.

Press the "*" key to extinguish the ALARM indicator after determining the type of alarm that occurred and the area of protection involved.

A history of the alarm condition will be stored in the control's memory and may be recalled at any time. See "Special Features" for more information.

False Alarms:

If for any reason a false alarm occurs, perform the following steps:

1. Enter your User Code.
2. The armed light should turn off.
3. Notify the proper authorities of the alarm immediately
4. Press the "*" key to extinguish the ALARM light.

MONITORING ZONES WITH THE SYSTEM DISARMED: (CHIME MODE)

To Turn Monitor On:

1. The system must be disarmed.
2. Press and hold the MONITOR command (key # 6).
3. The control station will beep three times each time a zone is opened.

To Turn Monitor Off:

1. Press and hold the MONITOR command (key # 6).

THE EMERGENCY KEYPAD PANIC ALARMS

To activate an Emergency Alarm:

1. Press the appropriate emergency panic key. The Emergency Alarm will activate.

**NOTE: Your Installer may have programmed the panic zones to ignore momentary key passes and to activate only by pressing and holding pressed for three seconds (or pressing at least twice within three seconds). Check with your security representative for the specific characteristics of your system.*

Resetting the Emergency Alarm:

1. Enter your User Code. Pressing the "*" key will extinguish the ALARM indicator, if lighted.

BYPASSING ZONES

**NOTE: When zones are bypassed, security is compromised. Do Not instruct temporary users on*

use of the bypass feature.

To Bypass A Zone:

1. The system must be disarmed.
2. Press the BYPASS key (#) then enter the number of the zone (1-6) to be bypassed.
3. The corresponding ZONE indicators (1-6) will blink to indicate zones that have been bypassed. The blinking will cease 30 seconds after the system is armed and the exit delay expires.
4. Repeat steps 2 and 3 to bypass other zones.

To Cancel A Zone Bypass:

1. The system must be disarmed.
2. Press the BYPASS key (#) followed by the number of the zone (1-6) to be restored to service.
3. The ZONE indicator of the previously bypassed zone will stop blinking.

To Cancel All Zone Bypasses:

1. Press the BYPASS key (#) followed by the "9" key.
2. All ZONE indicators will stop flashing. The zones are returned to operation.

The Reset Key:

The "*" key may be used to:

Silence the control station sounder and the audible output during Auxiliary "A" (Fire) and Auxiliary "C" (Emergency) alarms.

Silence the control station sounder during Burglar alarms.

NOTE: Pressing the "*" key does not reset the alarms or cancel reporting to the central station.